

Get Printer function POS

Description

The current X and Y positions are returned by Get_Printer when the POS message is specified.

Parameters

Message	Fields	Description
POS	<1>	Current X Position in inches
	<2>	Current Y Position in inches